


How To:

Page 1 of 2




STEP BY STEP CRIMP A 3pc BNC PLUG

1 Slide the ferrule over the co-ax

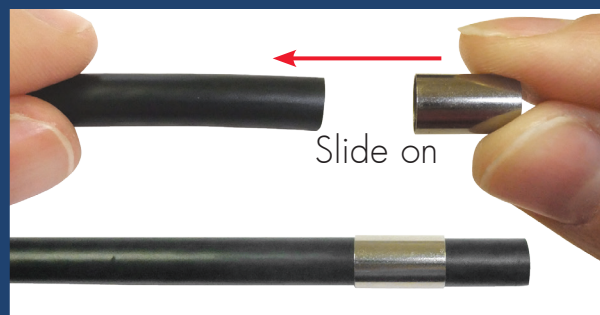

2 Attach the cable stripper (the cable end should be flush to the edge of the stripper and in the correct orientation as per the diagram on the stripper below).

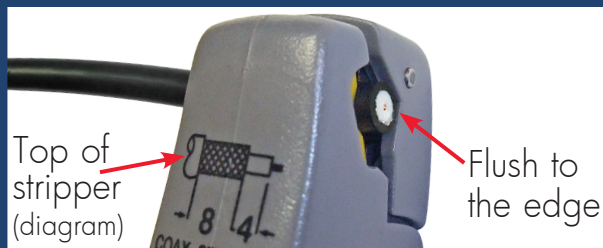


3 Rotate the cable stripper 2-3 times in the direction indicated on the cable stripper.



4 Remove the cable stripper from the co-ax and discard the waste to reveal the prepared co-ax.



5 Fold back the outer wire braid and slide on the centre pin.

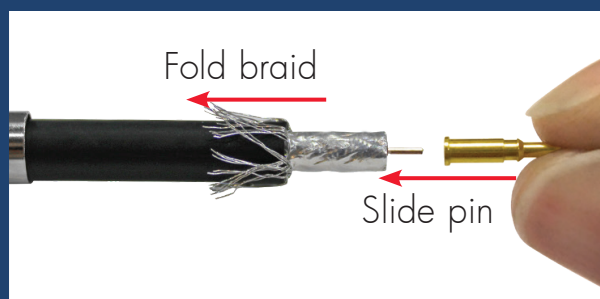


Please Note

These "Technical Tips" help sheets aim to answer commonly asked questions in a concise and informative manner - they are for advice & guidance only and do not replace any of the manuals or other literature supplied with our products.


Last edited:
07/04/2014

How To:


- 6** With the centre pin on the co-ax place in the correct slot (.068") on the crimp tool.

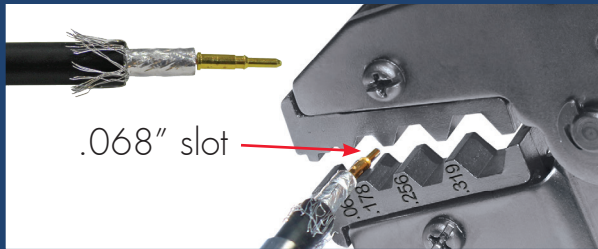


- 7** Holding the co-ax, squeeze the crimp tool until the mechanism releases.

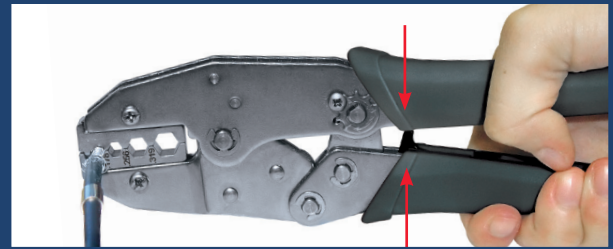


- 8** Slide the BNC body over the centre pin, a click should be felt.

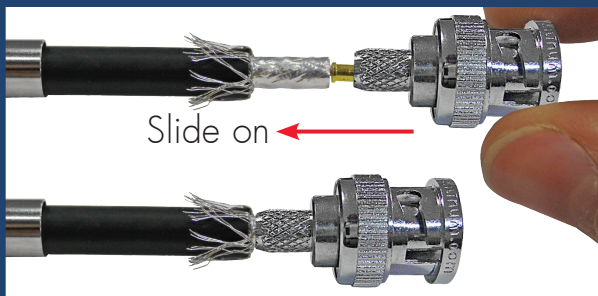

- 9** Move the wire braid & ferrule into position over the BNC body.

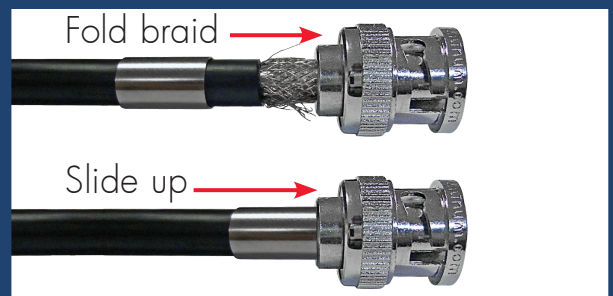

- 10** Place the ferrule & BNC body into the correct slot (.256") on the crimp tool.

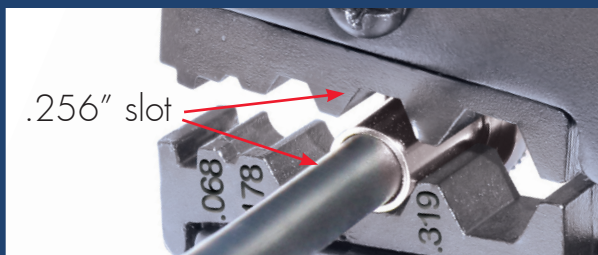

- 11** Holding the co-ax, squeeze the crimp tool until the mechanism releases.



Done!



Have fun **saving money** by crimping your own BNCs easily! Remember to test your cables (in case of any mistakes) for short or open circuits.

Please Note

These "Technical Tips" help sheets aim to answer commonly asked questions in a concise and informative manner - they are for advice & guidance only and do not replace any of the manuals or other literature supplied with our products.

Last edited:
07/04/2014